

Cleancut ES412

PERSONAL SHAVER

BATTERY OPERATED

Rotary-Type Shaver

NO TRIMMER IS INCLUDED!

Prior to using the ES412, the hair must be trimmed first as the ES412 is a finishing shaver and not designed to cut long hair. First, shave with either a razor or purchase the PS335 Cleancut trimmer to cut hairs short. The hair has to be shorter than 0.5 mm (5 o'clock shadow) which is similar in length to the one day growth on a man's beard.

○ Less than 0.5 mm hair



✗ Too long hair



HOW TO USE

As Cleancut ES412 is a finishing shaver, you need to perform the following steps first. This will ensure you experience the best results and a superior shave.

- Ensure your skin is clean and dry.
- Remove long hairs first – shorter than 0.5mm. (we recommend using the Cleancut Trimmer)
- Once your hairs are stubble length, you are ready to use the Cleancut Shaver.
- For best results, hold the skin taut. Begin using the shaver in slow, circular motions against the direction of the hair growth.
- Keep your shaver in gentle contact with the skin. You will hear the shaver pick up the short hairs. Do not press too hard.

HOW TO INSERT THE BATTERY


1. Turn off the switch.



2. Remove the battery cover in the direction of the arrow.



3. Insert an C-cell battery into the battery compartment, checking that its (+) and (-) terminals are properly aligned.

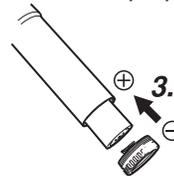

4. Close the battery cover and spin it in the direction of the arrow.



TROUBLE SHOOTING AND TIPS

My shaver is not switching on

If the shaver does not switch on, ensure the base of the shaver is properly screwed on. It is essential the coil contained in the base, makes contact with the battery. When the coil is in place, the battery is pushed up to make contact with the motor.

You can tell the shaver is working once you switch it on and hear the motor running.

My shaver is on but it does not remove any hair

Your skin must be dry and moisture-free. To ensure this, you can wash and dry the skin. Do not apply any creams.

Your hair must be very short (about the length of a man's 1 day beard growth). Please remember, the Cleancut is a finishing shaver. It will only work on short, coarse stubble-length hair. Therefore it is essential you trim the hairs first to a very short length.

Use the shaver in slow, circular motions.

After Use

Remove the battery after use. Brush away excess hairs and apply a few drops of clipper oil to help maintain the blades.

IMPORTANT SAFETY INSTRUCTIONS

When using an electrical appliance, basic precautions should always be followed, including the following:

Read all instructions before using your personal shaver.

DANGER

Unless you have technical skills of repairing electrical appliances, do not disassemble, attempt to repair, or tamper with the personal shaver. It may catch fire or malfunction to cause injuries.

Never wash the personal shaver with water or use it in a place where it is exposed to splashes of water such as a bathroom. Do not place or store the personal shaver in a humid place. A short circuit or an electric shock may be caused.

WARNING

Do not forcibly press against the blade, as this may break it to cause an injury to your skin.

Before using the body trimmer, check if the blade is damaged or deformed, as such blade may scratch the skin.

ID CORPORATION

236 Kalihi St., Honolulu, HI 96819
Tel: 808-845-7334 Fax: 808-842-5983
<http://www.ID-Corporation.com>

Made in Japan

